


1. REMOVE HAMMER-ON SLEEVE ON ONE END OF CABLE. (THE TAPED ON SILVER COLORED SLEEVE) . AND THREAD CABLE IN AND OUT THROUGH GROMMETS ON LONG SIDE OF NET. REINSTALL SLEEVE AND MAKE A LOOP WITH CABLE END. LAY ON A HARD SURFACE AND STRIKE WITH HAMMER UNTIL CABLE IS SECURED.
2. LEAD ROPES THROUGH EYELETS AND TIE TO LOOP WITH SEVERAL HALF HITCHES TO FORM A CONTINUES LINE THROUGH THE EYELETS.
3. WITH NET CLIP IN ITS LOWEST POSITION, ATTACH TO CABLE IN TOP OF NET.
4. HOIST NET IN STAGES EVENLY ON EACH POLE UNTIL IN UPPER MOST POSITION.
5. ATTACH VELCRO WRAPS AROUND NET AT THE BASE OF EACH POLE. ALSO, PLACE A VELCRO WRAP AT APPROX. 6 FEET UP ON THE POLES CLOSEST TO THE OPENING.
6. ATTACH SAFTEY SIGNS TO EACH OF THE THREE SIDES OF THE NET AT EYE LEVEL WITH WIRE TIES.

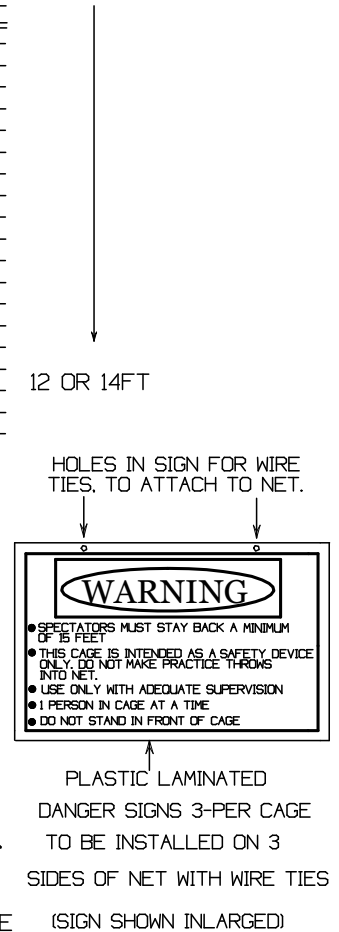

SCALE: NTS
 DATE: 11-08
 DRAWN BY: S.L.
 DWG: NET INSTALL - REV-08

REPLACEMENT NET FOR DISCUS CAGES

INSTALLATION DRAWING